

9Channel Mode:

Channel	Function	Introduction
1	Pan Running	0-255
2	Tilt Running	0-255
3	Color	
	Choose color	10-139
	Change the color autotomatically	140-255 from slow to fast
4	Gobo	
	Fixed Gobo	8-63
	Pattern dither	72-127
	Change the pattern autotomatically	128-255from slow to fast
5	Strobe	0-255 From slow to fast
6	Dimming	0-255
7	Running in Pan/Tilt	0-255
8	Auto Mode	60-159
	Sound Mode	160-255
9	Pan Running	10-100
	Tilt Running	101-200
	PanTilt Running	201-249
	Reset	250-255

Specification:

Voltage: AC110-220V, 50-60HZ

Power consumption: 30W

Light Source: 1PCS*10W White LED

Gobos: 8 gobos

Color: 8 colors

Channel: 9/11CH

Operation: DMX, Sound, Master-slave, Auto

Tilt: 540°

Pan: 270°

LED Stage Lighting Equipment User Manual

10W Mini Moving Head Gobo Light



Please read the instructions carefully before use

Function Instruction:

Addr	A001-A512	512 Address Set
CHnd	11CH	11Channel Set
	9CH	9Channel Set
SLnd	MAST	Master Mode
	SL 1	DMX512 Mode
	SL 2	Slave Mode
SHnd	SH 0	Effect0 (Recommend)
	SH 1	Effect1
	SH 2	Effect2
	SH 3	Effect3
Soud	on	Open the sound control mode
	oFF	Close the sound control mode
SEnS	0-99	Adjust the sensitivity of sound
bLAnd	bLAc	Without the 512 signal, return to zero
	Auto	Without the 512 signal,Auto
	Soun	Without the 512 signal,Sound
	HoLd	Without the 512 signal, keep last state of controller
LEd	OFF	Close the screen after 5 seconds
	ON	Screen open all the time
dISP	no	Display reverse
	YES	Display forward
rPAN	no	X dynamo corotation
	YES	X dynamo reverse rotation
rTiL	no	Y dynamo corotation
	YES	Y dynamo reverse rotation
REST	YES	System Reset

11Channel mode:

Channel	Function	Introduction
1	Pan Running	0-255
2	Pan Fine	0-255
3	Tilt Running	0-255
4	Tilt Fine	0-255
5	Color	
	Choose color	10-139
	Change the color autotomatically	140-255from slow to fast
6	Gobo	
	Fixed Gobo	8-63
	Pattern dither	72-127
	Change the pattern autotomatically	128-255from slow to fast
7	Strobe	0-255
8	Dimming	0-255
9	Running Speed in Pan/Tilt	0-255
10	Auto Mode	
	Function of Other Channel	0-59
	Auto Mode	60-159
	Sound Mode	160-255
11	Pan Running	10-100
	Tilt Running	101-200
	PanTilt Running	201-249
	Reset	250-255