

# 12\*10W MOVING BEAM

## USER MANUAL

---

## TABLE OF CONTENTS

Maintenance-----1  
Statement-----1  
Attention Item -----2  
Product introduction -----2  
13 Control Channel -----3  
Control Board-----4  
Controller Connection Diagram-----5

### Maintenance

1. Please keep the light in dryness and avoiding use in wet place.
2. Using intermittently can be extended the life.
3. Attention to clean the fan and lens usually in order to get the ventilating effects and lighting effects better.
4. Please do not wipe the crust using organic menstruum for avoid to damage the product.

### Statement

The product has well capability and intact packing when leave factory. All of the user should comply with above warning item and manual, any misuse cause of the damages are not included in our guarantee, and also can not be responsible for any malfunction & problem owing to ignore the manual.

Please forgive that we will not be notice for technical change.

### Attention Item

1. For guarantee the life of product, please don't put it on the wet place and also not use it in the place over 40 degree.
2. Please don't lay the product on the unfixable or shakable place.
3. Ask for the professional to maintain the product in order to avoid the danger of get an electric shock.
4. Power supply should not be changed over 10% while the light is using, it will be decreased the life of lamp if the power is too high, but it will be influenced the luminosity if the power is too low.
5. After power off, if it is need used again, please cool down over 20 minutes.
6. Please look round the manual for ensure the product can be used normally.

### Product introduction

Power supply: AC100~230V, 50Hz

Power consumption: 150W

Fiting lamp: 12\*10W LED, RGBW 4 in 1

DMX-control-channels: 13 or 10

Color: RGBW color-mixture

Shuttle: Flash rate: 0-13Hz

Dimmer: 0~100% mechanic dimmer

Maximum PAN-movement: 540

Maximum TILT-movement: 180

Master/Slave ativated by sound at pre-programmed function.

### 13mq Control Channel

Accept DMX512 control channel, detail as follow:

Channel	DMX-value	Feature
1	0-255	Dimmer 0~100%
2	0-255	Strobe
3	0-255	Color macro
4	0-255	Red 0~100%
5	0-255	Green 0~100%
6	0-255	Blue 0~100%
7	0-255	White 0~100%
8	0-255	PAN
9	0-255	PAN fine
10	0-255	TILT
11	0-255	TILT fine
12	0-255	PAN/TILT speed
13	0-255	PAN/TILT macro, Reset

### 10 Control Channel


Accept DMX512 control channel, detail as follow:

CHANNEL	DMX-VALUE	FEATURE
1	0-255	Dimmer 0~100%
2	0-255	Strobe
3	0-255	Color macro
4	0-255	Red 0~100%
5	0-255	Green 0~100%
6	0-255	Blue 0~100%
7	0-255	White 0~100%
8	0-255	PAN
9	0-255	TILT
10	0-255	PAN / TILT speed


# Control Board

**When navigating the menu:**  
 Use the <UP> button to move up.  
 Use the <DOWN> button to move down.  
 Use the <ENTER> button to move right.  
 Use the <MODE> button to move left, or to scroll through the left-most items in the menu map.

Use the <MODE/ESC> button to scroll through these menu items

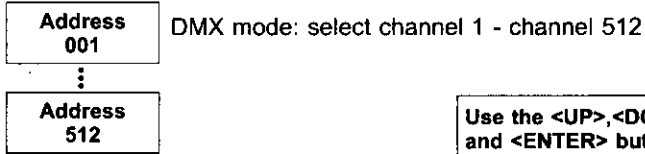

Use the <UP>, <DOWN>, and <ENTER> button to scroll through these menu items

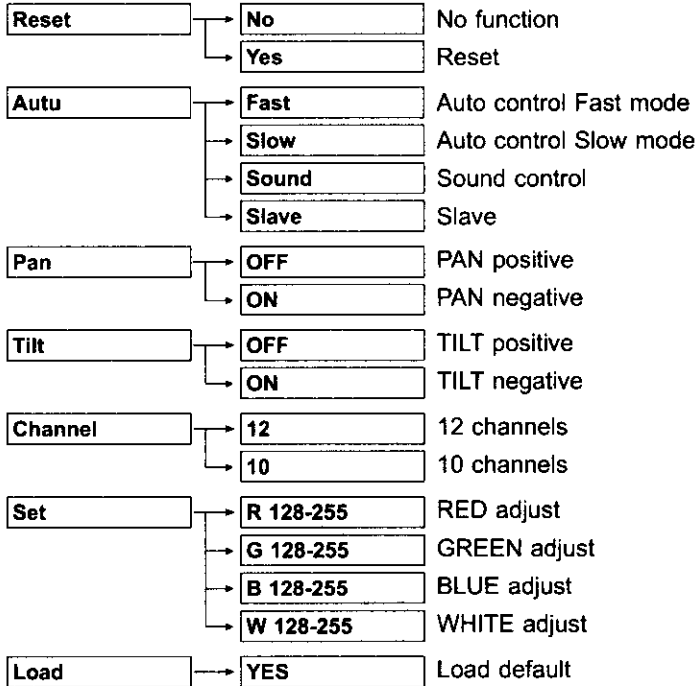

# Controller connection diagram

